




DEEP RED / BLACK CARBON FIBER MTL-600-DRB

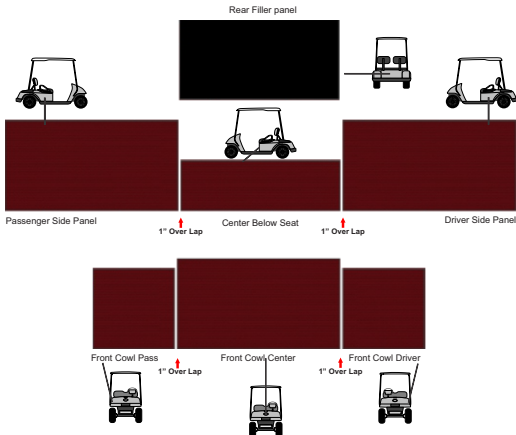

- * Save all scraps until install is complete.
- * allow a 1" overlap where each sheet comes together.
- * See back side of each sheet for placement label.
- * DO NOT install wet.

**** Do not install until you watch our 6 part video series**

**Golf Car
Wrap
Tutorial**



**Installation
Video**